

**SABRE.**

# HOME DEFENSE PROJECTILE LAUNCHER

.68 CALIBER



# OWNER'S MANUAL



## WARNING

To prevent **SERIOUS INJURY OR DEATH**, **DO NOT** use, attempt to load or deploy this Home Defense Projectile Launcher until you have read this entire manual.

### TABLE OF CONTENTS

|   |       |
|---|-------|
| Introduction .....                                      | 1     |
| Warning/Liability Statement .....                       | 1     |
| Safety Information .....                                | 2-3   |
| Feature Overview .....                                  | 4-5   |
| Specifications .....                                    | 5     |
| CO <sub>2</sub> Cartridge Installation / Removal.....   | 6-8   |
| Safe Use & Handling of CO <sub>2</sub> Cartridges ..... | 6     |
| CO <sub>2</sub> Installation.....                       | 7     |
| Remove Unpunctured CO <sub>2</sub> Cartridge.....       | 7     |
| Remove Punctured CO <sub>2</sub> Cartridge.....         | 8     |
| Removing the Magazine .....                             | 8     |
| Magazine Loading / Unloading Projectiles .....          | 9     |
| How to Load Projectiles.....                            | 9     |
| How to Unload Projectiles.....                          | 9     |
| Load Magazine .....                                     | 9     |
| Deploying/Shooting .....                                | 10-11 |
| Grip Safety .....                                       | 10    |
| Aiming .....  | 10    |
| Firing at Safe Target .....                             | 11    |
| Rear Sight Adjustment .....                             | 11    |
| Cleaning & Maintenance .....                            | 12    |
| Storage .....   | 13    |
| Troubleshooting.....                                    | 13-14 |
| Warranty and Repairs .....                              | 15-17 |
| Warranty and Repair Information.....                    | 15    |
| Limited Warranty.....                                   | 15-16 |
| Warranty and Non-Warranty Repairs.....                  | 16-17 |



## Video Assembly & Safety Guidelines

This QR Code will also be found on the bottom of several pages throughout this manual enabling you to watch videos demonstrating the steps covered in the provided instructions.

# Thank you for your purchase of a SABRE® Home Defense Projectile Launcher.

Your Home Defense Projectile Launcher will provide many years of dependable service if cared for properly. To avoid serious injury or death, please take the time to read this manual thoroughly and become familiar with your Home Defense Projectile Launcher's parts, operation, and safety precautions before you attempt to load or deploy this Home Defense Projectile Launcher. This manual should be used as a reference when performing routine maintenance.

If you need assistance, please contact SABRE® Customer Service at 1-800-325-9568.



## WARNING

### WARNING/LIABILITY STATEMENT & DISCLAIMER

This Home Defense Projectile Launcher launches projectiles at a high rate of speed that can lead to serious injury or death if not used properly. Purchaser is responsible for and assumes all liability resulting from unsafe handling, use contrary to instructions or warnings (which is hereby defined as "misuse") or any action that constitutes a violation of any applicable laws or regulations. SABRE® hereby disclaims all liability and any legal, express or implied warranties. In no event shall SABRE® be liable for direct, indirect, special, incidental or consequential damages resulting from breach of warranty or any other legal theory. In no event will SABRE® be liable for sums in excess of the purchase price of the product. SABRE® shall not be not liable for lost profits or goodwill; downtime; damage or destruction of items or equipment used with, or in conjunction with, SABRE®; personal injury or loss; or any other damages, resulting from the use of the Home Defense Projectile Launcher under circumstances which includes intentional, reckless, negligent, accidental discharge and any contact outside of the authorized target acquisition area. The authorized target acquisition area is from the belt line / navel to upper chest. **To prevent SERIOUS INJURY OR DEATH, DO NOT aim or shoot at head, face, neck, spine, or groin. DO NOT shoot at a distance of less than 6ft (2m).**

All information contained in this manual is subject to change without notice. SABRE® reserves the right to make changes and improvements to products without incurring any obligation to incorporate such improvements into products previously sold. If you do not agree with the assumptions and risk as set forth above, please return your product for a full refund.

SABRE® does not accept user liability. If you **DO NOT** accept the liability, **DO NOT** use the SABRE® Home Defense Projectile Launcher.

**SAFETY IS YOUR RESPONSIBILITY!**

## SAFETY INFORMATION



### WARNING

To prevent **SERIOUS INJURY OR DEATH**, you must observe the same precautions as you would with any firearm to assure the safety of yourself and everyone around you. The operator should always use caution when using, maintaining, or otherwise handling the Home Defense Projectile Launcher. You must ensure that the product is being legally used. By purchasing this Home Defense Projectile Launcher, you assume total responsibility for its safe and lawful use.


- **DO NOT** load or deploy this Projectile Launcher until you have completely read this manual and are familiar with its safety features, mechanical operation, and handling characteristics.
- Treat the Home Defense Projectile Launcher with the same care as a loaded firearm. Handle the Home Defense Projectile Launcher as if it were loaded at all times. Keep your finger off the trigger until ready to shoot.
- **DO NOT** look down the barrel of the Home Defense Projectile Launcher. Accidental discharge into the eyes may cause permanent injury or death.
- Keep the Home Defense Projectile Launcher in Safe mode until ready to use (see Warning messages on page 3). **NEVER** point or discharge the Home Defense at anything you **DO NOT** intend to shoot.
- Always maintain control of the muzzle. Keep the muzzle pointed down or in a safe direction.
- Eye protection (safety glasses) should always be worn by the user.
- Load the Home Defense Projectile Launcher with SABRE® projectiles only. **DO NOT** disassemble the Home Defense while it is pressurized with air supply. **DO NOT** pressurize the Home Defense while it is disassembled.
- Keep exposed skin away from escaping CO<sub>2</sub> gas when installing or removing the CO<sub>2</sub> cartridge, or if the Home Defense Projectile Launcher or CO<sub>2</sub> cartridge is leaking.
- Use only .68 Caliber SABRE® brand projectiles in the Home Defense Projectile Launcher—**NEVER** load or deploy foreign objects. The use of any other projectile in the Home Defense Projectile Launcher is a misuse that may result in product malfunction, failure, or serious injury or death. Use of any non-SABRE® brand projectile voids all warranties. SABRE® accepts no responsibility for product performance or results should the Home Defense Projectile Launcher be used with any projectile(s) other than SABRE® projectiles.



### WARNING

To prevent **SERIOUS INJURY OR DEATH**, **DO NOT** aim or shoot at head, face, neck, spine or groin.

**NEVER AIM OR SHOOT AT THE AREAS OF THE BODY MARKED IN RED.**

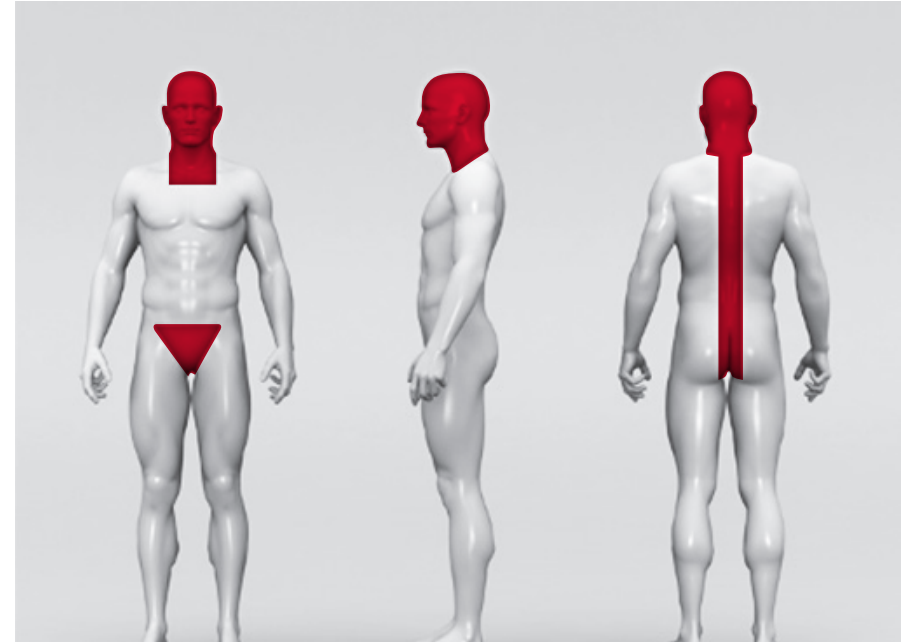

# OVERVIEW

Home Defense Projectile Launcher (1)




Padded Soft Side Case (Water-Resistant Fabric) (1)



Hex Wrench (1)




12g CO<sub>2</sub> Cartridges (2 QTY)

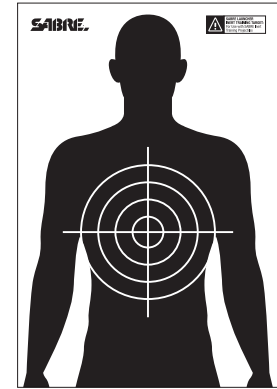

Paper Practice Target (1)



# OVERVIEW

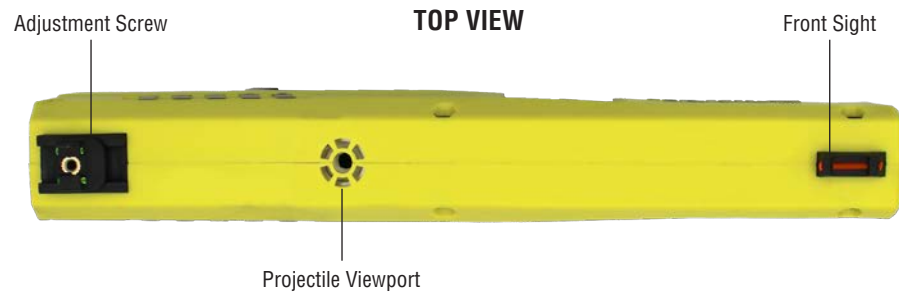

## CO<sub>2</sub> CARTRIDGE INSTALLATION / REMOVAL

### WARNING

Eye protection (safety glasses) should always be worn by the user. Once the CO<sub>2</sub> cartridge is installed and the Home Defense Projectile Launcher has been fully pressurized (see page 7), **USE CAUTION** as the Home Defense Projectile Launcher is now capable of firing after deactivating the grip safety. Treat the Home Defense Projectile Launcher with the same care as a loaded firearm at **ALL TIMES**. Keep your hands and face away from vaporizing CO<sub>2</sub> gas. If the gas gets into contact with the skin, it can cause rapid cooling and frostbite. Before removing the cartridge from the Home Defense Projectile Launcher, make sure that the CO<sub>2</sub> cartridge is empty (See Page 10).

### SAFE USE & HANDLING OF CO<sub>2</sub> CARTRIDGES

### WARNING

It is possible that certain conditions may affect a CO<sub>2</sub> cartridge, which can impact its proper performance. Temperatures that are higher than 70°F/21°C or lower than 59°F/15°C may affect the deployment and total range the projectile travels. Rapid firing of the Home Defense Projectile Launcher can affect the performance of the CO<sub>2</sub> cartridge as well.

High temperatures can increase the pressure inside both the CO<sub>2</sub> cartridge and the Home Defense Projectile Launcher, resulting in higher than standard operating pressure. This excessive pressure can cause the Home Defense Projectile Launcher to malfunction or even sustain permanent damage. The maximum storage and operation temperature should never exceed 120°F (49°C). This temperature can easily be reached if the Home Defense Projectile Launcher is left under direct sunlight on a bright day. To ensure proper operation and avoid potential hazards, do not expose the Home Defense Projectile Launcher or CO<sub>2</sub> cartridges to high temperatures or direct sunlight for extended periods. Overheating can cause the CO<sub>2</sub> cartridge to explode, leading to damage to the Home Defense Projectile Launcher and potentially causing **SERIOUS INJURY OR DEATH**.

Rapid consecutive deployments can cause a drop in temperature in the Home Defense Projectile Launcher and the CO<sub>2</sub> cartridge, which may lead to decreased projectile velocity and insufficient CO<sub>2</sub> pressure for proper deployment. This issue is more pronounced in cold weather. To avoid this, allow longer intervals between shots, giving the CO<sub>2</sub> cartridge time to warm up and regain pressure, ensuring normal velocity.

During rapid deployment, the muzzle velocity of each shot will decrease, which can affect your shooting accuracy and reduce the total number of shots you can get



Scan for Video Instructions


from each CO<sub>2</sub> cartridge. When you fire quickly in succession, the CO<sub>2</sub> cartridge cools down, resulting in lower pressure and, consequently, reduced velocity for each subsequent shot. This can lead to a decrease in accuracy and efficiency. Allowing time between shots helps the CO<sub>2</sub> cartridge to warm back up, maintaining optimal pressure and performance.

Pay careful attention to the operation of the Home Defense Projectile Launcher. It is important to avoid using the Home Defense Projectile Launcher with a CO<sub>2</sub> cartridge that is low on pressure. Indicators of insufficient pressure include:

- A) The sound of the shot is noticeably quieter compared to when the cartridge is full.
- B) Reduced projectile velocity, indicated by the projectile hitting the target lower than where the Home Defense Projectile Launcher was aimed, suggesting a drop in shooting speed.

### CO<sub>2</sub> INSTALLATION

Obtain a 12 gram CO<sub>2</sub> cartridge. Turn the Flip Knob Base Screw counterclockwise to allow space for the CO<sub>2</sub> cartridge. Insert the CO<sub>2</sub> cartridge into the CO<sub>2</sub> slot of the Magazine with the small end of the CO<sub>2</sub> cartridge pointing up and into the puncture pin of the Magazine (Figure 1).

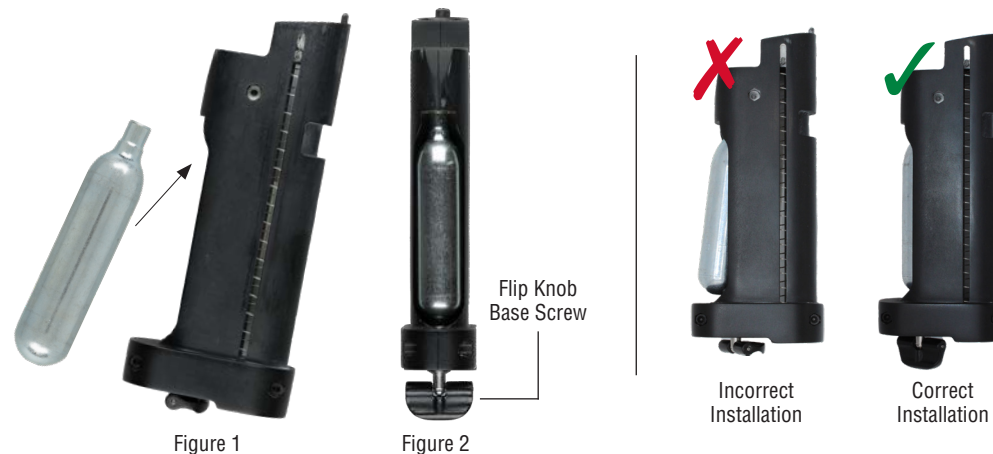

Place the Magazine into the Home Defense Projectile Launcher and seat it fully. Pull down the Flip Knob Base Screw (Figure 2) and turn clockwise until the small end of CO<sub>2</sub> cartridge just touches the puncture pin. Then, quickly turn the Flip Knob Base Screw clockwise until the cartridge is punctured and sealed. A very brief hissing sound confirms the Home Defense Projectile Launcher is being pressurized. Ensure that no CO<sub>2</sub> gas is escaping from the puncture pin area. If the hissing sound continues, let the CO<sub>2</sub> tank leak out completely, and call SABRE® customer service. **DO NOT** attempt to use.



Scan for Video Instructions

## CO<sub>2</sub> CARTRIDGE INSTALLATION / REMOVAL

### DANGER




**NEVER USE A DAMAGED CARTRIDGE. USE EXTREME CAUTION WHEN REMOVING PUNCTURED CO<sub>2</sub> CARTRIDGES. IMPROPER USE, REPLACEMENT, OR STORAGE MAY RESULT IN PROPERTY DAMAGE, SERIOUS INJURY OR DEATH.**

### REMOVE PUNCTURED CO<sub>2</sub> CARTRIDGE

Eye protection **MUST** be worn by the user and any person within range. Push Magazine Release Button to remove the Magazine from Home Defense Projectile Launcher. Pull down Flip Knob Base Screw (Figure 3). Turn counterclockwise very slowly to allow CO<sub>2</sub> to leak from the cartridge. Note: Turning Flip Knob Base Screw too fast will cause the CO<sub>2</sub> cartridge to freeze.

Or

Push Magazine Release Button to remove Magazine from Home Defense Projectile Launcher. Once the Magazine is removed, push down on projectile release button to remove all projectiles from Magazine. Ensure no projectiles remain in the barrel area of the Home Defense Projectile Launcher by looking through the Projectile Viewport at the top of the Home Defense Projectile Launcher. Also look inside the grip once the Magazine is removed to ensure no projectiles remain in the chamber.

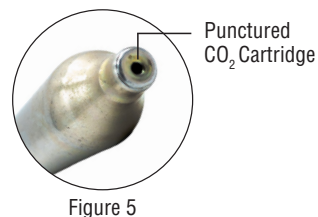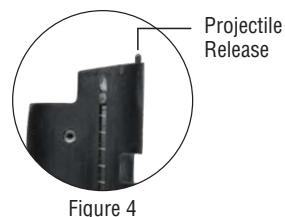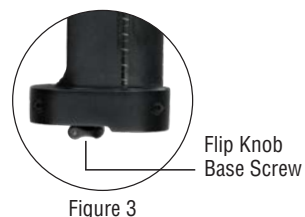

Insert empty Magazine back into Home Defense Projectile Launcher. Then dry deploy in a safe direction until you no longer hear air exiting the Home Defense Projectile Launcher and the CO<sub>2</sub> cartridge is empty. After the CO<sub>2</sub> cartridge is empty, push Magazine Release Button to remove Magazine from Home Defense Projectile Launcher (Figure 4). Pull down Flip Knob Base Screw and turn counterclockwise until CO<sub>2</sub> cartridge can be removed. Be cautious as CO<sub>2</sub> cartridge could be cold.

**DO NOT RE-USE PUNCTURED CO<sub>2</sub> (See Figure 5).**



Scan for Video Instructions

## REMOVING THE MAGAZINE

### WARNING

Not seeing a round in the Projectile Viewport does not indicate that the Launcher is unloaded or safe.

Place your hand under the Magazine. Press the Magazine Release Button and pull the Magazine free from the Home Defense Projectile Launcher. Ensure no projectiles remain in the barrel area of the Home Defense Projectile Launcher by looking through the Projectile Viewport at the top of the Home Defense Projectile Launcher. Also look inside the grip once the Magazine is removed to ensure no projectiles remain in the chamber.



## MAGAZINE LOADING / UNLOADING PROJECTILES

### WARNING

Use **ONLY** .68 Caliber SABRE® brand projectiles in the Home Defense Projectile Launcher. **NEVER** load or deploy foreign objects. The use of any other projectile in the Home Defense Projectile Launcher is a misuse that may result in product malfunction, failure, or serious injury or death.

Use of any non-SABRE® brand projectile voids all warranties. SABRE® accepts no responsibility for product performance or results should the Home Defense Projectile Launcher be used with any projectile(s) other than SABRE® projectiles.



Scan for Video Instructions

## MAGAZINE LOADING / UNLOADING PROJECTILES



### WARNING

#### Projectiles:

Read the label carefully before opening the container or using any contents. By opening the container, you acknowledge that you have read the entire label and accept its terms and conditions.

Handle SABRE® projectiles with care and follow proper cleanup procedures. SABRE® projectiles can cause skin irritation, serious eye irritation, and serious respiratory irritation.

#### Exposure may result in:

-Copious tears -Temporary blindness -Burning sensation -Difficulty breathing

#### Important Precautions:

-Never ingest the projectiles. -Flush eyes and affected areas with cool water.  
-In case of accidental exposure, exit the area immediately. -Do not rub or apply creams, salves, lotions, or oils.  
-Remove contact lenses and contaminated clothing. -Discard contact lenses and wash exposed clothing before reuse.  
-Seek medical advice/attention if exposure or ingestion occurs.

#### Storage and Handling:

-Keep all SABRE® projectiles out of the reach of children.  
-Store in a secure location with temperatures between -15°F and 150°F.  
-SABRE® projectiles have a shelf life of 3 years; dispose of them safely after this period.

#### Exposure Procedures:

##### Eye Contact:

-Flush eyes and contaminated areas immediately with large amounts of cool water. -Move to fresh air.  
-Remove and discard contact lenses.

##### Skin Contact:

-Wash skin with soap and water. -Wash contaminated clothing before reuse.  
-Flush skin with large amounts of cool water. -Do not rub or apply creams, salves, oils, lotions, or burn cream.

##### Inhalation:

-Administer oxygen if breathing is difficult. -Keep the person calm.  
-Begin artificial respiration if not breathing.  
-Move to fresh air immediately if high concentrations are inhaled. -Seek medical attention if breathing difficulty persists.

##### Ingestion:

-Although unlikely, treat ingestion as an acute non-specific airway reaction. -Do not induce vomiting.  
-Seek medical attention immediately.

## MAGAZINE LOADING / UNLOADING PROJECTILES

### HOW TO LOAD PROJECTILES

Insert a maximum of 7 projectiles into the Magazine from the top (Figure 6). The projectiles will be held in place automatically by the projectile retainer pin.

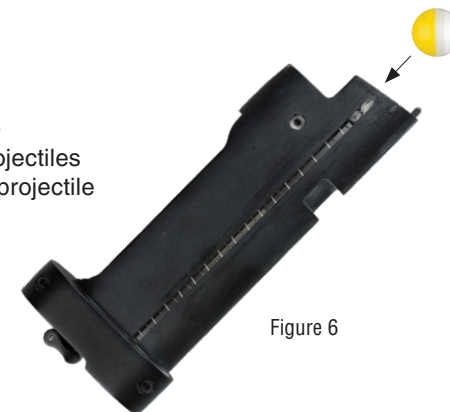


Figure 6

### HOW TO UNLOAD PROJECTILES

Press down on the Magazine projectile release pin to remove the projectiles (Figure 7).

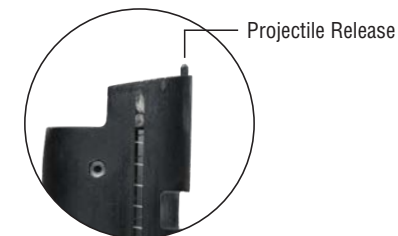


Figure 7

### LOAD MAGAZINE

Place the Magazine in the grip of the Home Defense Projectile Launcher as illustrated at right (Figure 8). Once the Magazine has started entering the grip seat, continue to insert the Magazine until it is secured by the Magazine catch.

**Note:** If Magazine does not lock on first insertion, remove it completely and reinsert.



Figure 8

## REAR SIGHT ADJUSTMENT

### TOOLING

The tool necessary for adjusting the rear sight is a 1.5 mm hexagon wrench (included).



### INSTRUCTIONS

1. Use hexagon wrench to loosen the screw located on the rear sight.
2. Slide the rear sight on the scale to bring it into position (Figure 11).
3. Tighten the screw with hexagon wrench to stabilize the rear sight.

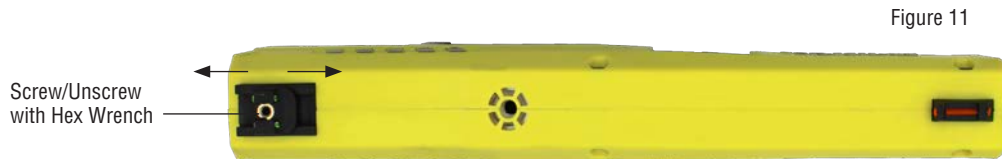


Figure 11

## DEPLOYING/SHOOTING

### GRIP SAFETY

The Home Defense Projectile Launcher is equipped with a grip safety located on the top of the rear grip of the Home Defense Projectile Launcher (Figure 9). To engage grip safety, press and hold grip safety button inward. Grip the safety with palm and thumb webbing. When the grip safety is held inward, the Home Defense Projectile Launcher is active, and the trigger can be pulled to deploy the projectiles.



Figure 9



Scan for Video Instructions

### AIMING

Line-up the front sight in the middle of the rear sight.

Hold the Home Defense Projectile Launcher so that the center of the target rests on top of the front sight. The top edge of the front sight and the center of the target should be in a line.

The Front Red Fiber Optic Sight and Rear Green Fiber Optic Sights should be in an even line across. (Figure 10).

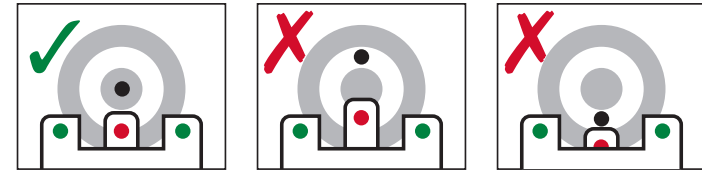


Figure 10

### FIRING AT SAFE TARGET (PRACTICE)



## WARNING

To prevent **SERIOUS INJURY OR DEATH**, you and others in the immediate area should always wear eye and ear protection made specifically to protect your eyes and ears. Ricochets can and do occur.

- **NEVER** reuse projectiles. **ONLY** use SABRE® Inert .68 Caliber Practice Projectiles when deploying at the paper practice target.
- Hang the paper practice target provided on a concrete or brick wall. Always choose your target location carefully, use only Inert Projectiles, and be mindful of projectile fragmentation which can ricochet back towards you.
- Treat your Home Defense Projectile Launcher as you treat a loaded firearm. Always aim your Home Defense Projectile Launcher in a **SAFE DIRECTION**. Never aim at anything you do not intend to shoot.
- While gripping the Home Defense Projectile Launcher, push the grip safety inward on the rear of Home Defense Projectile Launcher and squeeze the trigger with steady pressure until the Home Defense Projectile Launcher deploys.
- Through the Home Defense Projectile Launcher automatic reload system, the projectile will be cocked and ready to deploy after each pull of the trigger.
- After all projectiles have been deployed, reload Magazine (see page 9).
- **DANGER** – Ricochets can project further distances than original shooting distance.
- **DO NOT RE-USE CO<sub>2</sub> CARTRIDGE ONCE IT HAS ALREADY BEEN PUNCTURED.**

## CLEANING & MAINTENANCE



### WARNING

#### DO NOT MODIFY OR ALTER YOUR LAUNCHER.

- Attempts to modify or disassemble the Home Defense Projectile Launcher in any way inconsistent with this manual is a misuse, may make the Home Defense unsafe to use, may cause **SERIOUS INJURY OR DEATH**, and will void the warranty.
- If the Home Defense Projectile Launcher is dropped, visually check to ensure it functions properly before using it again. If the function is altered, such as a short or weak trigger pull, this may indicate worn out or broken parts. Contact SABRE® Customer Service at 636-343-0200 or toll free at 800-325-9568, before using the Launcher again.

Always wear eye protection (safety glasses) when cleaning or performing maintenance on your Home Defense Projectile Launcher. Before you attempt to clean and maintain your Home Defense Projectile Launcher, ALWAYS make sure the CO<sub>2</sub> cartridge is removed and projectiles are unloaded from the Magazine to reduce the chance of an accidental discharge. Never clean or perform maintenance on a loaded or pressurized Home Defense Projectile Launcher. Follow CO<sub>2</sub> cartridge removal instruction on pages 6-8 and projectile removal on pages 6-8.

Your Home Defense Projectile Launcher will maintain proper function longer if you place 1 drop of 100% Silicone Lubrication Oil (non-petroleum based) on the tip of CO<sub>2</sub> cartridge every 500 shots. This will lubricate the o-ring in the Magazine to prevent dry rotting.

- Do not use Petroleum based products and aerosol products as this can damage O-Rings. Do not use any petroleum-based or aerosol cleaning solvents.
- Clean your Home Defense Projectile Launcher using a damp towel to wipe off grease and debris.
- To remove dirt and debris from barrel, use a .68 caliber soft nylon bore brush or .68 caliber squeegee with Magazine removed.
- To clean Magazine well and breech, use a small soft rag, or cleaning brush with Magazine removed.
- Clean the Magazine with a damp towel to wipe off grease and debris. Dry springs immediately to help prevent rusting. Powder residue may accumulate on the Magazine. Remove this powder to ensure proper operation of the Home Defense Projectile Launcher.

## STORAGE

Store your Home Defense Projectile Launcher safely by making sure the Magazine is unloaded and the CO<sub>2</sub> is removed.

- Home Defense Projectile Launcher should be stored in such a manner as to protect against unauthorized use by children and others.
- These products should be stored in such a manner to protect against theft and subsequent misuse.

## TROUBLESHOOTING / FAQ

See videos. If not addressed, contact customer service.

| PROBLEM   | SOLUTION  |
|---|---|
| Magazine will not feed projectiles correctly.   | Clean the Magazine with a damp towel to wipe off grease and debris. Dry springs immediately, if necessary, to help prevent formation of rust.<br>NOTE: If a problem still exists, contact SABRE® Customer Service at 636-343-0200 or toll free at 800-325-9568.   |
| When I pull the trigger, the Launcher does not deploy.                                | Remove the Magazine, replace CO <sub>2</sub> cartridge, and repeat the deployment procedure (See Page 8-9).<br>NOTE: If a problem still exists, contact SABRE® Customer Service at 636-343-0200 or toll free at 800-325-9568.   |
| My Launcher deploys, with audible shooting sound, but it doesn't deploy a projectile. | Remove Magazine and ensure projectiles are properly loaded in the Magazine.<br>NOTE: If a problem still exists, contact SABRE® Customer Service at 636-343-0200 or toll free at 800-325-9568.   |
| I hear CO <sub>2</sub> leaking from the Magazine.                                     | Ensure the CO <sub>2</sub> cartridge is properly installed and punctured. Turn Flip Knob Base Screw clockwise to ensure that it is fully tightened. If you still hear leaking CO <sub>2</sub> , remove CO <sub>2</sub> cartridge and inspect puncher pin for damage. NOTE: If a problem still exists, contact SABRE® Customer Service at 636-343-0200 or toll free at 800-325-9568. |



Scan for Video Instructions

## TROUBLESHOOTING / FAQ

### ***Is my Home Defense Projectile Launcher considered a firearm?***

No, it is considered less-lethal and not considered a firearm by ATF.

### ***Where can I carry my Home Defense Projectile Launcher?***

Always check state and local regulations relating to CO<sub>2</sub> powered launchers and self-defense products.

### ***Is my CO<sub>2</sub> cartridge reusable?***

When all the CO<sub>2</sub> gas has been dispensed, it cannot be reused.

### ***How many shots can be effectively deployed with a 12-gram CO<sub>2</sub> cartridge?***

Up to 14 shots.

### ***What happens when I rapid deploy?***

During rapid deployment, the velocity of each shot will diminish. This can affect shooting accuracy and you will get fewer shots per CO<sub>2</sub> cylinder.

### ***Why do I have low projectile velocity?***

Fast consecutive shooting may produce a drop in temperature in the Home Defense Projectile Launcher, as well as the CO<sub>2</sub> cartridge. This could result in lower projectile velocities and may even lower gas pressure enough so that the launcher will not deploy. This condition can be especially apparent when deploying projectiles in cold weather and can be avoided by allowing more time between deployments. This permits the gas to increase in temperature and pressure and will produce normal velocities.

### ***How do I know when to change the CO<sub>2</sub> cartridge?***

Care should be exercised to ensure that the Home Defense Projectile Launcher is not deployed with a CO<sub>2</sub> cartridge that is low in pressure. Here are some indicators of insufficient pressure:

- A) The sound of the shot is not as loud as when the cylinder is full.
- B) The projectile hits the target, but in a lower position than it would with a full CO<sub>2</sub> cartridge (This is a result of the shooting speed dropping).

### ***Can I reuse projectiles?***

DO NOT re-use launcher projectiles as this could damage your Home Defense Projectile Launcher and void the warranty.

## WARRANTY AND REPAIRS

### **WARRANTY AND REPAIR INFORMATION**

Security Equipment Corporation (“SABRE<sup>®</sup>”) is dedicated to quality products and outstanding service. In the unlikely event of a problem with this SABRE<sup>®</sup> Home Defense Projectile Launcher (“Home Defense Projectile Launcher”) and/or accessories (“Accessories”), customer service personnel are available to assist you. For customer service and/or other information, please contact:

SABRE<sup>®</sup> Security Equipment Corporation  
815 Sun Park Drive  
Fenton, MO 63026

customersupport@sabrered.com

Phone: 636-343-0200

Toll Free: 800-325-9568

### **LIMITED WARRANTY**

SABRE<sup>®</sup> warrants to the original purchaser that it will make any repairs or replacements necessary to correct defects in material or workmanship, at no charge to you, for the Projectile Launcher for a period of two (2) years from the date of original retail sale. Refer to Your Warranty Card & Register Your Launcher at [www.Sabrered.com/Launcher-Warranty](http://www.Sabrered.com/Launcher-Warranty). Further, SABRE<sup>®</sup> warrants to the original purchaser that it will make any repairs or replacements necessary to correct defects in material or workmanship, at no charge to you, for SABRE<sup>®</sup> Accessories for a period of ninety (90) days from the date of original retail sale. All SABRE<sup>®</sup> asks is that you properly maintain and care for the Home Defense Projectile Launcher and Accessories (collectively, the “Product”) and that you have warranty repairs performed by our Certified Tech Center.

This Limited Warranty is non-transferable, and it does not cover damage or defects to the Product caused by (a) improper maintenance; (b) alteration or modification; (c) unauthorized repair; (d) accident; (e) abuse or misuse; (f) neglect or negligence; and/ or (g) normal wear and tear.

SABRE<sup>®</sup> does not authorize any person or representative to assume or grant any other warranty obligation with the sale of this Product.

THIS IS THE ONLY EXPRESSED WARRANTY GIVEN WITH THE PURCHASE OF THIS PRODUCT; ANY AND ALL OTHER EXPRESSED WARRANTIES ARE DISCLAIMED. THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE LIMITED TO THE APPLICABLE LIMITED WARRANTY PERIOD SET FORTH HEREIN, AND NO WARRANTIES, WHETHER EXPRESSED OR IMPLIED, SHALL APPLY AFTER EXPIRATION OF SUCH PERIOD. ALL OTHER WARRANTIES AND REPRESENTATIONS, ORAL OR WRITTEN, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED AND DO NOT APPLY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HERE OF.

## WARRANTY AND REPAIRS

Except as required by law, no representative, agent or employee of SABRE® is authorized to make warranties, representations, or obligations inconsistent with or in addition to those set forth in this limited warranty.

Some states and nations do not allow limitations on the duration of implied warranties, so the above limitation may not apply to you.

The sole and exclusive liability of SABRE® and/or its authorized dealers under this Limited Warranty shall be for the repair or replacement of any part or assembly determined to be defective in material or workmanship.

SABRE® SHALL NOT BE LIABLE FOR, AND YOU EXPRESSLY DISCLAIMS, ANY DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL DAMAGES (COLLECTIVELY, "DAMAGES") ARISING OUT OF THE SALE OR USE OF, OR YOUR INABILITY TO USE, THE PRODUCT. NO PAYMENT OR OTHER COMPENSATION WILL BE MADE FOR DAMAGES, **SERIOUS INJURY OR DEATH** TO PERSON OR PROPERTY OR LOSS OF REVENUE WHICH MIGHT BE PAID, INCURRED OR SUSTAINED BY REASON OF THE FAILURE OF ANY PART OR ASSEMBLY OF THE PRODUCT.

Some states and nations do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that may vary from state to state or nation to nation.

Limitations: This warranty is void if the product is damaged by improper or abnormal use (including but not limited to any uses that are contrary to the instructions and/or warnings) or by accident; the request for warranty arises in any way out of use contrary to the instructions or warnings; if the product is misused (including but not limited to the use contrary to the instructions and warnings), altered or modified in any way; or if any attempt is made to repair the product without authorization from SABRE®. It is solely the purchaser's responsibility to determine the suitability of these products for each particular application. The SABRE® Home Defense Projectile Launcher is not suitable and is not authorized, for use in any situations that might pose potentially injurious to life and health, other than those situations that the products are intended.

This warranty is not assignable or transferable.

## WARRANTY AND NON-WARRANTY REPAIRS

For Warranty and Non-Warranty Repairs:

1. In order to return an item or send for repairs, you must have an Return Authorization number prior to sending. Any item sent to SABRE® without prior consent will not be processed.
2. To obtain a Return Authorization number, contact SABRE® Customer Service at 1-800-325-9568 or email customersupport@sabred.com
3. If you have aftermarket parts on your Home Defense Projectile Launcher, please test the Home Defense Projectile Launcher with original stock parts before returning the Home Defense Projectile Launcher for service or repair.

## WARRANTY AND REPAIRS

4. Always unload and remove the CO<sub>2</sub> cartridge from the Home Defense Projectile Launcher (see page 6-8). Do not ship the CO<sub>2</sub> cartridge.

5. Ship the Product to:

SABRE® Service Dept.  
815 Sun Park  
Fenton, MO 63026

Return Authorization is required. Please contact customer support at customersupport@sabred.com or call Phone: 636-343-0200  
Toll Free: 800-325-9568.

6. You must pre-pay postage and delivery charges.

7. Provide the date of purchase, invoice number and serial number located on the Projectile Launcher.

8. Briefly describe the repair requested.

9. Include your name, return address, and a telephone number where you can be reached during normal business hours, if possible.

SABRE® makes every effort to complete its repair work as quickly as possible. SABRE® will return the Product to you via regular ground UPS.

### **WARNING**

#### TO PREVENT SERIOUS INJURY OR DEATH:

- Prior to use, you **MUST** read the Owner's Manual and watch the warnings and instructions at [www.sabred.com/homedefensekit](http://www.sabred.com/homedefensekit). **NO** personal safety product, including this product, can guarantee your safety in an attack. Failure to use properly could result in the inability to stop an assailant. Use counter measures if necessary
- **DO NOT** look down the barrel of the launcher.
- **KEEP OUT** of reach of children.
- **DO NOT** aim or shoot at the head, face, neck, spine or groin.
- **DO NOT** inhale or consume CO<sub>2</sub> cartridge.
- **NEVER USE** indoors unless protecting yourself or your family against an intruder.
- Projectiles can travel **OVER 200 FT** (61 m). Ensure there are no people within range.
- CO<sub>2</sub> cartridge **MUST** be fully discharged **BEFORE** removing from the launcher.
- **DO NOT** mishandle CO<sub>2</sub> cartridge, may cause cartridge to expand or explode. **CONTENTS UNDER PRESSURE, DO NOT** expose to heat or store above 120°F (49°C).
- All training and practice **MUST** take place outdoors with **INERT** projectiles and against a structure such as a concrete or brick wall.
- **ONLY DEPLOY** at the practice target that has been secured to a concrete or brick wall during training.
- **NEVER** deploy at people or objects during training.
- **ONLY DEPLOY INERT** projectiles during training.



# SABRE<sup>®</sup>

MAKE IT SAFE<sup>®</sup>



747 Sun Park Drive, Fenton Missouri 63026 USA

Phone: 636-343-0200 Toll Free: 800-325-9568

[www.sabrered.com](http://www.sabrered.com)



Product Details