


### Installation Instruction

**NOTE:** Narrow spacing between the door frame and door may result in the inability to use this item.  
Requires at least 1/8" between the door and frame.

1. Before installing the Portable Door Lock, check to make sure it will fit. There should be at least an 1/8" gap between the door and frame. Insert the Secure Latch in to the strike plate hole to ensure the door works smoothly. Do not close the door if the gap is not big enough.
2. Press the Secure Lock Button and slide the Locking Block away from the Secure Latch.
3. Open the door and insert the Secure Latch into the strike plate hole on door frame side.
4. Close the door. The door bolt should fit in the strike plate hole and the door should close easily but tightly.
5. Slide the Locking Block forward so that it is pressed firmly against the door.
6. To unlock the door, press the Secure Lock Button and slide the Locking Block toward you/away from the door.

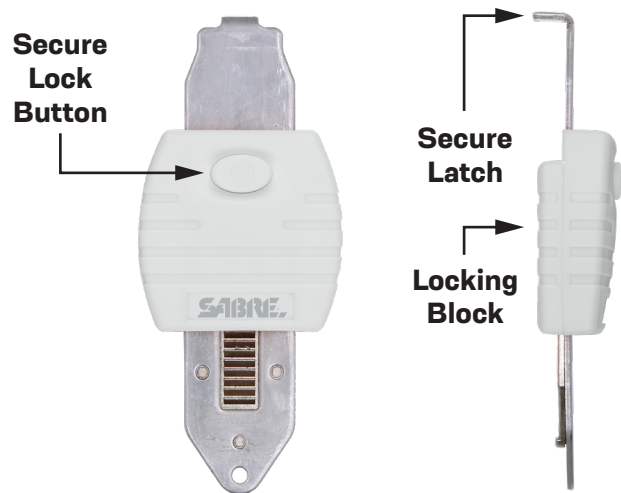

Travel Bag  
Included



### ⚠ WARNING

A properly installed and maintained security product may **ONLY** reduce the risk of events such as burglary, robbery, break-ins. It is **NOT** insurance or a guarantee that such events will not occur, that adequate warning or protection will be provided, or that there will be no personal injury, death, and/or property damage as a result.